


# NOVA LUCE

9010228

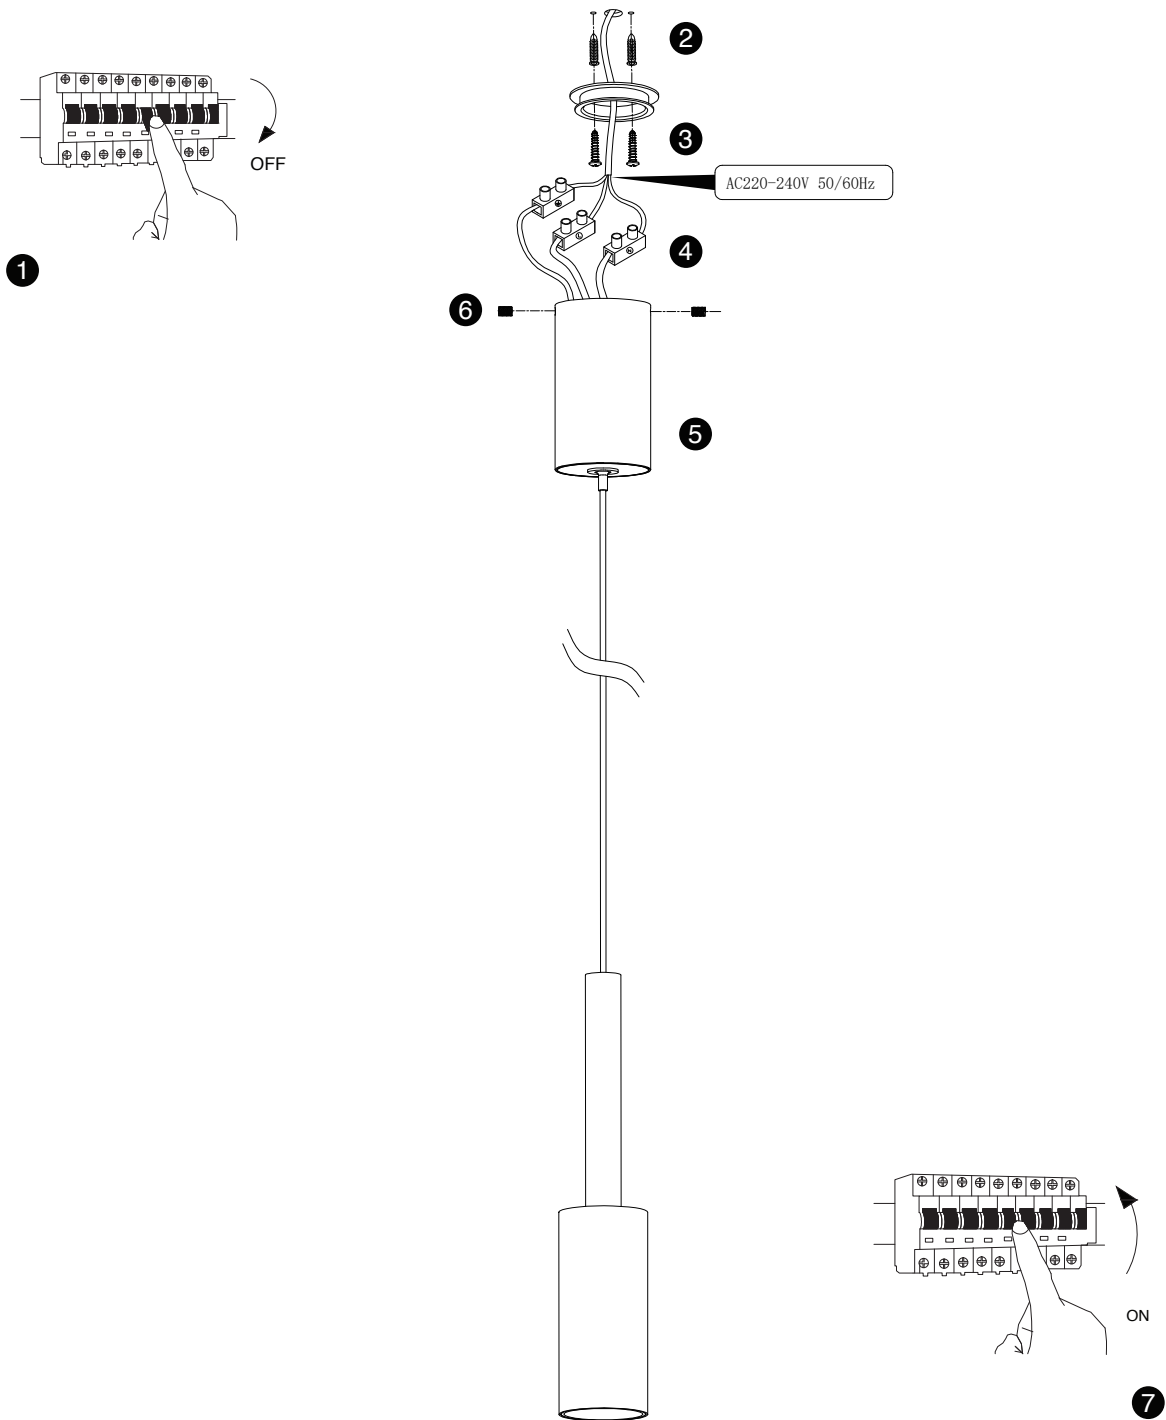

1. Turn off general switch
2. Drill holes
3. Apply Screws
4. Connect the wires

5. Apply the hanging element
6. & Side Screws
7. Turn on general switch