NOVA LUCE

DRIVER

Put the acrly panel into the bottom of the lamp
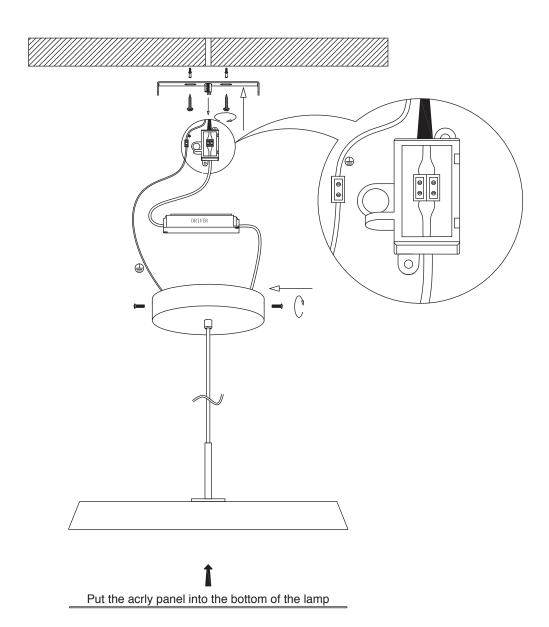
Turn OFF general Switch

1. Drill holes
2. Apply plastic anchors
3. Apply screws to make it stable
4. Connect wires
5. Apply the side screws

Turn ON general Switch