


NOVA LUCE


9345634

1

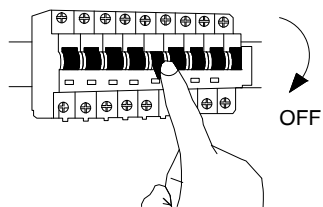


Turn off the general switch

2

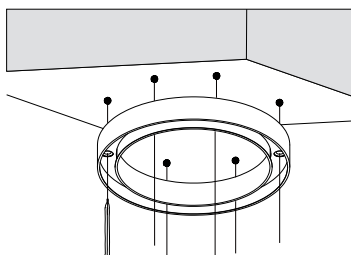


Mark where to drill holes

3

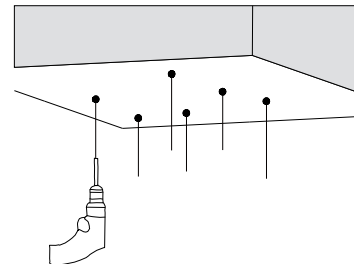


Drill on the marked areas

4

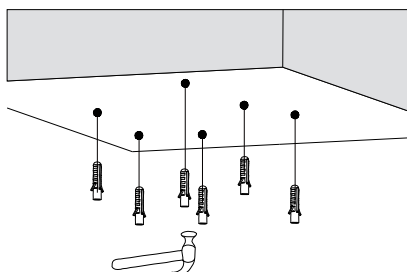


Apply plastic anchors

5

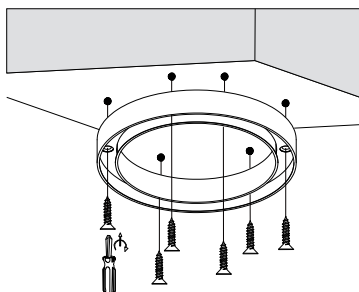


Apply screws

6

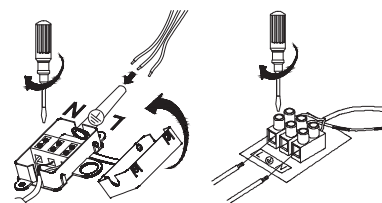


Connect the wires

7

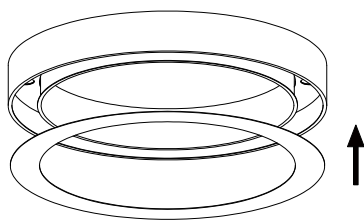


Put the product in place

8

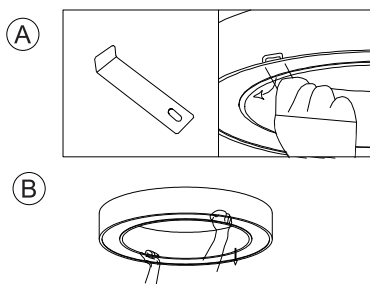

With the extra tool edjust product

9

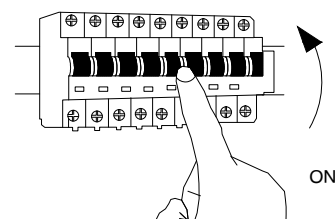

Turn on the general switch

9

