

INSTALLATION MANUAL

$K\Lambda RIZM\Lambda$ [luce]
















Do not operate with power supply connected.










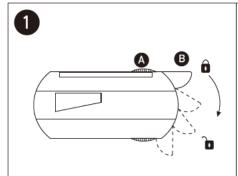

To mount the track adaptor into the track system, first check that the selector knob (A) is at OFF position and the adaptor lock B is disengaged.

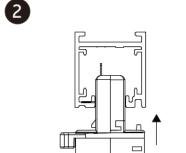


When installing the adaptor into the track, ensure that it is orientated correctly.




Rotate adaptor lock (B) clockwise 90° to connect the adaptor to the neutral circuit.






Rotate selector knob (A) to the position of desired circuit.






Circuit 1: Rotate the knob (A) 90° clockwise from the starting position OFF, to connect circuit 1.






Circuit 2: Rotate the knob (A) 90° anti-clockwise from the starting position OFF, to connect circuit 2.





Circuit 3: Rotate the knob (A) 180° clockwise from the starting position OFF, to connect circuit 3

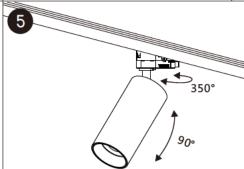

The installation is complete, support can be freely rotated 0° 350° the lamp body can be freely rotated 0° 90°.

Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.